

4 5/8 in.

ANTI-TIP BRACKET
MOUNT HOLES


MUST ANCHOR INTO WALL STUD

INSTALLATION INSTRUCTIONS:

1. Use this template to mark where you wish the unit to be installed.
2. Ensure a 120v wall outlet is available the area indicated below if the power cord is to be hidden.
3. Ensure a 10" (25cm) clearance on the top and both sides of the unit.
4. This unit can accommodate any baseboard mouldings with a maximum height of 8.5" (22cm) and maximum thickness of 1.5" (4cm).
5. Follow the outline on this template to mount the anti-tip bracket. We recommend securing the bracket into a minimum of two wall studs.
6. Remove this paper template.
7. Using two people position the template approximately 12 inches from the wall. Plug the unit into the wall.
8. Lift and center the unit under the mounting bracket.
9. Secure the unit to the mounting bracket with screws provided.
10. Set the leveling legs.

81 3/4 in.

80 5/8 in.

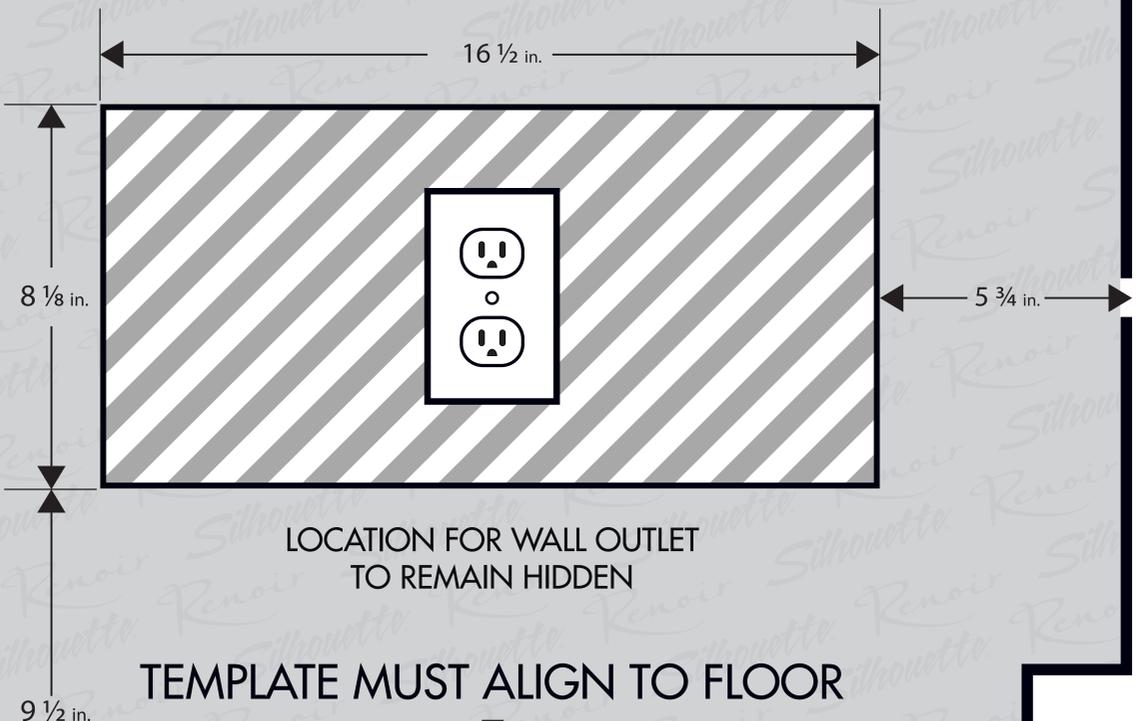

9 1/2 in.